



Ingredient Scale

R210

User's Manual

CONTENTS

CONTENTS.....	1
INTRODUCTION.....	2
Safety Precautions.....	2
INSTALLATION	2
Package Contents	2
Parts Description	3
Selecting the Location	3
Power	3
Battery Power.....	3
OPERATION	4
Keypad and display description.....	4
Status indicators.....	4
Key Descriptions.....	4
Turning Scale On/Off	4
Zero Operation & Setting	4
Changing Units of Measure	4
SETTINGS	5
Tare Setting.....	5
Auto off Setting	5
MAINTENANCE.....	5
Cleaning.....	5
Troubleshooting	5
Service Information.....	5
TECHNICAL DATA	6
Specifications	6
Compliance.....	6
Disposal.....	6
ERROR AND STATUS MESSAGE.....	7
Error Message	7
WARRANTY	7

INTRODUCTION

This manual provides detailed instructions for the installation work, operation and maintenance instructions of the CHARDER R210 Scale, please read this manual completely before installing and operating scale.

Safety Precautions

Please follow these safety precautions:

- Verify AC Adapter input voltage matches the local AC power supply.
- Do not insert liquids or foreign object.
- Do not operate the scale in hostile environments.
- Do not drop loads or leave permanent load on the platform. This may damage the measuring system.
- Do not place the scale upside down on the pan.
- Do not open the scale. Never attempt to make repairs yourself because this could be dangerous. The warranty is void if this stipulation is ignored. The scale may only be opened by authorized personnel.
- Always disconnect the device from the power supply before installing, servicing, cleaning or performing maintenance.
- Check the power cable regularly for damage. If it is damaged, immediately disconnect the device from the power supply.

INSTALLATION

Package Contents

- R210 Scale
- AC Power Adapter
- User's Manual



— R210 Scale




— AC Power Adaptor



— User's Manual

Parts Description

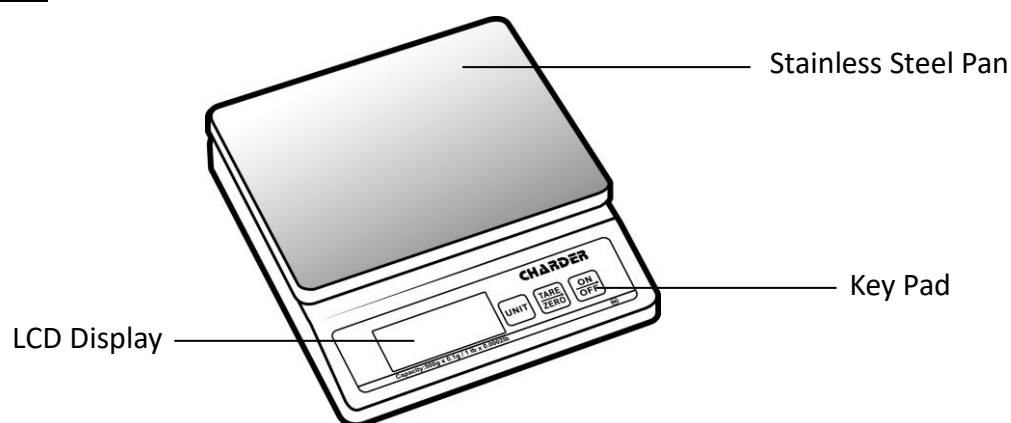


Selecting the Location

Select a firm, vibration-free and horizontal location for the scale. Avoid locations with direct sunlight, excessive air current, heat sources, or rapid temperature fluctuations.

Power

Connect the AC Adaptor to the AC mains supply. Connect the plug to the AC jack on the bottom of the scale as shown in the illustration below. The power outlet should be close to the scale and easily accessible.

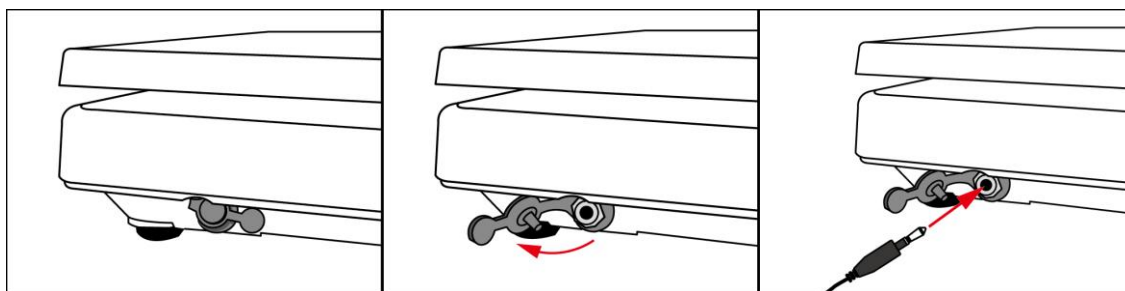

Battery Power

The scale will automatically switch to battery operation if there is a power failure or the power cord is removed to provide uninterrupted scale operation.

Note: When low battery  is displayed, the scale will shut off after 30 seconds.




CAUTION:

Risk of explosion can occur if replaced with the wrong type or connected improperly.
Do not disassemble, repair or otherwise manipulate the battery socket.
Obey the local laws and regulations on disposing the battery.

OPERATION

Keypad and display description

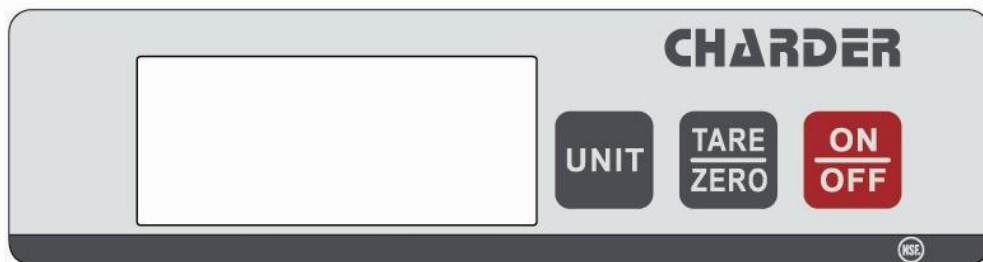

Status indicators

ICON	Description
	Stability display
g / lb	Currently chosen weight unit

Key Descriptions

KEY	DESCRIPTION	FUNCTION
	ON/OFF Switch	-Turn on and off display
	Tare / Zero	-Tarring
	Unit Switch	-Change the weighing units to alternate units of measurement

Turning Scale On/Off

To turn the scale on, press the **[ON/OFF]** button. Scale will display **88888** and then enters the active weighing mode.

To turn the scale off, press the **[ON/OFF]** button.

Zero Operation & Setting

When power on the scale and if the weight on the scale is within the initial zero tolerance, the scale will display zero automatically.

Although there is nothing on the pan and the display is not zero, press **[TARE/ZERO]** button to set zero to the scale.

Changing Units of Measure

In weighing mode, use **[UNIT]** to display the next available measuring unit. Repeat process to scroll through all units.

SETTINGS

Tare Setting

Place an empty container on the scale and press **[TARE/ZERO]**. The display will show a net value of "0". To clear the Tare value, press **[TARE/ZERO]** with the pan empty.

Auto off Setting

Press **[ON/OFF]** and hold **[TARE/ZERO]** button for 3 seconds until the **SEt** display show. And the display will show A_OFF, press **[TARE/ZERO]** to enter auto off setting and press **[UNIT]** to select auto turn off time or off this function. And press **[TARE/ZERO]** and press **[UNIT]** to see *End* to confirm setting.

MAINTENANCE

Cleaning

Before cleaning, disconnect the power plug from power outlet and remove batteries from the appliance to power off the unit.

- Clean with a damp cloth and a mild soap or similar agents if necessary, and buffed dry with.
- Do not use any acids, alkalis or strong active solvents to clean the housing or control panels.

Troubleshooting

PROBLEM	POSSIBLE CAUSE	REMEDY
Scale will not turn on	Battery discharged	Check the battery or adapter
	Power cord not plugged in properly	Check power cord connection and plugged in properly into the power outlet.
	Other failure	Have the scale serviced by Charder authorized service center.
Poor accuracy	Unstable environment	Move the scale to suitable location, refer to the manual <i>Selecting the Location</i> .
	Improper calibration	Perform calibration.

Service Information

If the troubleshooting section above does not resolve or describe your issue, contact your authorized Charder service agent for further assistance or email to info_cec@chrder.com.tw

TECHNICAL DATASpecifications

MODEL	R210		
Capacity	500 g / 1 lb	3000 g / 5 lb	5000 g / 10 lb
Graduation	0.1 g / 0.0002 lb	0.5 g / 0.001 lb	1 g / 0.002 lb
Power Requirements	100 V - 240 V DC 9V / 0.3A AC adapter 9V battery		
Weighing Units	g , lb		
Display	0.5 in LCD 5-digit 7-Segment, Character height 20 mm/0.79 in		
Key Function	3 Keys On / Off, Tare / ZERO, UNIT		
Operating Temperature and Humidity	5°C to 35° C / 41°F to 95°F 15% - 85% RH		
Weighing Mode	Weighing		
Construction	304 Stainless Steel housing and platform, ABS plastic bottom		
Platform size	150 x 120 mm / 6 x 4.7 in		
Assembled Dimensions	150 x 170 x 40 mm / 6 x 6.7 x 1.57 in		
Weight	0.62 kg / 1.37 lb		

Compliance

The R210 is certified by NSF to comply with NSF/ANSI 169–2009. This certificate ensures that your R210 scale has been tested for food(sanitation) safety.

Disposal

In conformance with the European Directive 2002/96 EC on Waste Electrical and Electronic Equipment (WEEE), this device may not be disposed of with domestic waste. This also applies to countries outside the EU, according to their specific requirements. Please dispose of this product in accordance with local regulations at the collecting point specified for electrical and electronic equipment. For more detailed information about recycling this product, please contact the local distributor from which you purchased this device.

ERROR AND STATUS MESSAGEError Message

ERROR MESSAGE	DESCRIPTION	REMEDY
	Low battery indication	Replace the battery.
	Counting value is higher than the high limit value	The scale has detected a failure with load cell or wiring. Have the scale serviced by Charder authorized service center.
	Counting value is lower higher than the low limit value	The scale has detected a problem with load cell or wiring. Have the scale serviced by Charder authorized service center.
	Fail to write EEPROM	Have the scale serviced by Charder authorized service center.
	Overload	Remove excess weight and use scale within its limits.

WARRANTY

Charder scales are warranted against defects in material and workmanship for a period of 1(one) year from the date of purchase. Please retain your receipt as proof of purchase. Warranty expiration on products returned without proof of purchase will be determined from the manufacturing date code or the date of shipment to the authorized dealer. Coverage may be invalidated as this date is previous to purchase date.

No other express or implied warranty is given by Charder

Freight damage on returns is not covered under warranty.

This warranty does not apply for following reasons, the product has been damaged by accident or misuse, parts and products of a consumable nature, exposed to radioactive or corrosive materials, has foreign material penetrating to the inside of the product, or as a result of service or modification by other than Charder.

CHARDER

Charder Electronic Co., Ltd.

No.103, Guozhong Rd.,

Dali Dist., Taichung City

41262 Taiwan (R.O.C.)

Tel: +886-4-2406 3766

Fax: +886-4-2406 5612

www.charder.com

© 2019 Charder Electronic Co., Ltd., All rights reserved

CD-IN-00262 [REV002] 12/20